



Q700

hiptop®
SLIDE

User's Guide

hiptop is a registered trademark of Danger, Inc.



HELLOMOTO

Your Motorola Q700 hiptop slide device will change the way you communicate, get organised, and stay connected!


- Your **device** connects seamlessly to wireless networks.
- Listen to your favourite **music** with the music player (page 38).
- Snap pictures with your 1.3-megapixel **camera** (page 40) and send them in an E-mail or multimedia message (page 43).
- Access any **Web** site (page 46) just like you do on your computer, and exchange **instant messages** (page 47).
- Access your personal **Web portal** (with the “**Desktop Interface**” page 50).
- Explore the fully featured phone and personal information management (PIM) applications.
- Have fun with the entertainment applications.

For more information: To read instructions on all the Motorola Q700 hiptop slide applications, use any computer to sign in to the Desktop Interface via the internet (see page 50) and click **Help** to open the online version of this guide. To find out more about your device and accessories, go to www.hellomoto.com.au.

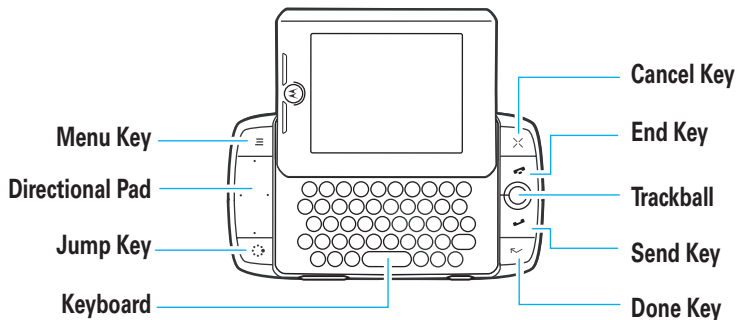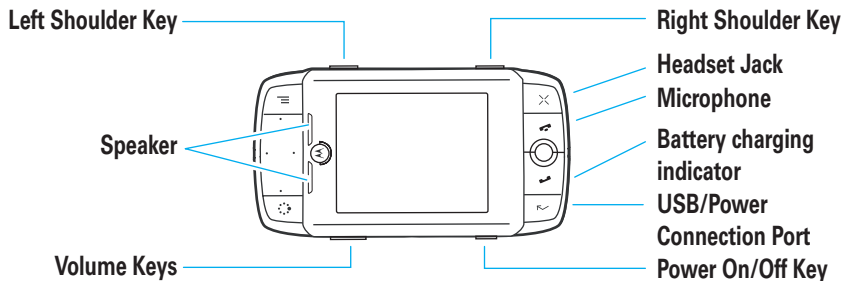


Introducing your new Motorola Q700 hiptop slide wireless device. Here's a quick anatomy lesson.

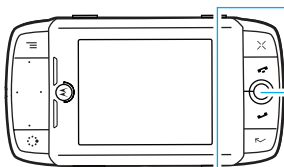


Jump Screen






① Press and hold the Power Key  for a few seconds. Your device displays the Jump Screen.

② Press the Trackball  to select highlighted items or to open pop-up menus. Scroll the Trackball  or press the Directional Pad  up, down, left, or right to highlight items.

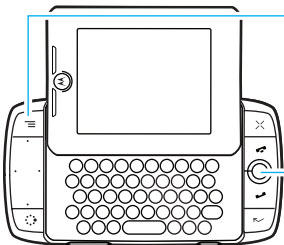Jump Screen Menu



③ Press the Menu Key  to open a menu.

④ Press the Trackball  to select highlighted items or to open pop-up menus. Scroll the Trackball  or press the Directional Pad  up, down, left, or right to highlight items.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com.au

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. America Online, AOL, the America Online & Design logo, the AOL & Design logo, and the Triangle Logo, are registered trademarks of America Online, Inc. in the United States and/or other countries. Instant Messenger and Buddy List are trademarks of America Online, Inc. Microsoft, Windows and Windows Me are registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation.

Macintosh, Quicktime and Quicktime logo are registered trademarks of Apple Computer, Inc. iTunes is a registered trademark of Apple Computer, Inc. All rights reserved. iTunes is a trademark of Apple Computer, Inc., registered in the U.S. and other countries. All rights reserved. **WiFi** is a Certification Mark of the Wireless Fidelity Alliance, Inc. MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson. microSD is a trademark of the SD Card Association.

© Motorola, Inc., 2007.

Danger and hiptop are registered trademarks of Danger, Inc.

This manual contains portions of content from Danger, Inc. Copyright (c) 2007. This product contains software licensed from Danger, Inc. Copyright (c) 2007.

Copyright (c) 1985, 1986, 1988, 1992, 1993, 1999 The Regents of the University of California.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Portions of software licensed under the above license include the following additional copyright notices and additional conditions.

Copyright (c) 2004 Albert Chin-A-Young. This code derived from software contributed to Berkeley by Diomidis Spinellis and James A. Woods, derived from original work by Spencer Thomas and Joseph Orst.

Copyright (C) 1995, 1997 Wolfgang Solfrank. Copyright (c) 1995 Martin Husemann. All advertising materials mentioning features

or use of this software must display the following acknowledgement: This product includes software developed by Martin Husemann and Wolfgang Solfrank.

This code is derived from software contributed to Berkeley by Berkeley Software Design, Inc.

Copyright(c) UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Berkeley and its contributors.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

contents

menu map	8	
Safety Information	9	
FCC Notice	13	
Use and Care	14	
EU Conformance	15	
Recycling Information	16	
essentials	17	
about this guide	17	
SIM card	18	
memory card	18	
battery	19	
turn device on & off	21	
registration	22	
display	23	
make a call	23	
answer a call	24	
store a phone number	24	
call a stored phone number	24	
your phone number	25	
basics	26	
device interface	26	
basic navigation	27	
phone controls	29	
title bar and indicators	30	
text entry	32	
key guard	32	
handsfree speaker	33	
customise	34	
sound profiles	34	
applications	34	
backgrounds	34	
font size	35	
display backlight	35	
display backlight brightness	35	
date & time	35	
calls	36	
call log	36	
return a call	36	
caller ID	36	
emergency calls	37	
voice mail	37	
applications	38	
mini music player	38	
play music	39	
create a playlist	40	
camera	40	

address book	41	network	59
messaging	43	games	60
Web browser	46	airplane mode	60
BigPond Catalogue®	47	advanced Bluetooth	
instant messaging	47	features	60
calendar	48	memory card	61
notes	48		
to do	49	service & repairs	62
connections	50	SAR Data	63
desktop interface	50	WHO Information	64
connect your device		Privacy and Data Security . . .	65
to a computer	51	Microsoft License	66
Bluetooth® wireless	52	Driving Safety	71
other features	54	index	73
advanced calling	54		
advanced text features	54		
address book	56		
messaging	58		
device settings	58		
call times & costs	59		

menu map

main menu



BigPond Catalogue

- Downloads
- Themes
- Ringtones
- Games
- Applications



Web browser



E-mail



Instant Messaging

- Live Messenger
- Yahoo! MESSENGER



Phone



Phone Messaging

- Multimedia Messaging
- SMS



Address Book



Planning

- Calendar
- Notes
- To Do



Photo Album

- Memory Card Album
- Device Album



SonicBOOM



Games

This is the standard main menu layout.
Your device's menu may be different.

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

* The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2007.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola—or if you hang your mobile device from a lanyard around your neck—keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your health care provider.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue use if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- Do not place a mobile device in the airbag deployment area.

Responsible driving practices can be found in the “Smart Practices While Driving” section in this user’s guide and/or at the Motorola Web site: www.motorola.com/callsmart.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can’t concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Operational Warnings

Obey all posted signs when using mobile devices in public areas.








Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted and can include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Batteries and Chargers

Caution: Improper treatment or use of batteries may present a danger of fire, explosion, leakage, or other hazard. For more information, see the “Battery Use & Battery Safety” section in this user’s guide.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven.



the ground

Don't drop your phone.

European Union Directives Conformance Statement



[France Only]

Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives



The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at

www.motorola.com/rtte. To find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site.

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Disposal of your Mobile Device and Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved national recycling schemes, and further information on Motorola recycling activities can be found at: www.motorola.com/recycling.

Disposal of your Mobile Device Packaging and User's Guide

Product packaging and user's guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.









essentials

about this guide

This guide shows how to open a menu feature as follows:

Find it:  > Phone Messaging > SMS >  > New Message

This means:

- 1 Press the *jump key*  to open the Jump screen.
- 2 Use the *trackball*  to scroll to **Phone Messaging**, and press the trackball  to select it.
- 3 Use the *trackball*  to scroll to **SMS**, and press the trackball  to select it.
- 4 Press the *menu key*  to display the pop-up menu.
- 5 Use the *trackball*  to scroll to **New Message**, and press the trackball  to select it.

Tip: You can also use the *directional pad*  to scroll.

This guide shows keys that need to be pressed at the same time as:

 + .

symbols



This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

SIM card

Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.


Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and contacts entries. It can also contain your voice mail, sms, and Internet access settings. If you put your SIM card in another device, that device uses your phone number.

SIM installation

1



2



memory card



You can use a removable microSD™ memory card with your device to store and retrieve multimedia objects (such as photos and music). Some applications, such as **Camera**, allow you to store photos on your device or memory card. For more memory card features, see page 61.


Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your device. You cannot send, copy, or change copyrighted files.

To transfer files to/from your memory card, see page 51.

install or remove a memory card

- 1 Remove the back cover and the battery.

- 2 **To install the memory card,** make sure the memory card's metal contacts are facing down, and slide the memory card into the slot until you hear a click.



To remove the memory card, push it in and release. The memory card slides a little way out of the slot. Pull the memory card out of the slot.

- 3 Replace the battery and back cover.

battery

Battery Use & Battery Safety

- **Motorola recommends you always use Motorola-branded batteries and chargers.**

The warranty does not cover damage caused by non-Motorola batteries and/or chargers.

Caution: Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard. Improper battery use, or use of a damaged battery, may result in a fire, explosion, or other hazard.

- Battery usage by children should be supervised.
- **Important:** Motorola mobile devices are designed to work best with qualified batteries.

If your battery is not charging, take the following steps:

- Remove the battery and inspect it to confirm that it bears a Motorola “Original Equipment” hologram;
- If there is no hologram, the battery is not a qualified battery;
- If there is a hologram, replace the battery and retry charging it;
- Contact a Motorola Authorised Service Centre.
- New batteries or batteries stored for a long time may take more time to charge.
- **Charging precautions:** When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging. Always take your mobile device with you when you leave your vehicle.
- When storing your battery, keep it in a cool, dry place.

- It is normal over time for battery life to decrease, and for the battery to exhibit shorter runtime between charges or require more frequent or longer charging times.
- **Avoid damage to battery and mobile device.** Do not disassemble, open, crush, bend, deform, puncture, shred, or submerge the battery or mobile device. Avoid dropping the battery or mobile device, especially on a hard surface. If your battery or mobile device has been subjected to such damage, take it to a Motorola Authorised Service Centre before using. Do **not** attempt to dry it with an appliance or heat source, such as a hair dryer or microwave oven.
- **Use care when handling a charged battery**—particularly when placing it inside a pocket, purse, or other container with metal objects. Contact with metal objects (e.g. jewellery, keys, beaded chains) could complete an electrical circuit (short circuit), causing the battery to become very hot, which could cause damage or injury.

Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling centre for proper battery disposal.




Warning: Never dispose of batteries in a fire because they may explode.

battery installation

1



2



3



battery charging

New batteries are not fully charged.

Tip: Motorola batteries have circuitry that protects the battery from damage from overcharging.


New batteries are not fully charged.

Plug the battery charger into your device and an electrical outlet.

Your device might take several

seconds to start charging the battery.


Note: You can also charge your battery by connecting a cable from your device's mini-USB port to a USB port on a computer. Both your device and the computer must be turned on, and your computer must have the correct software drivers installed and be plugged into an electrical outlet. A Motorola Original USB cable and supporting software may be included with your device. These tools also are sold separately.

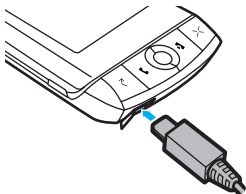



Your device's red charge indicator comes on and a lightning bolt appears over the battery charging icon, in the title bar. The internal battery bars move while the battery is charging, and stop when the battery is fully charged. Disconnect your charger once charging is complete.

turn device on & off

Caution: Some devices ask for your SIM card PIN code when you turn them on. If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**. Contact your service provider.

To turn on your device, press and hold  for a few seconds. If prompted, enter your SIM card PIN.

To turn off your device, press and hold .

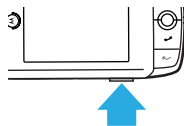



registration

Before you can start using your Motorola Q700 hiptop slide, you must complete the registration steps.


Note: These instructions are for new users, not returning users. Returning users can simply sign in using their existing username and password.

- 1 Wait for account activation** – Before you can use your account, your account must be activated. This can take up to 48 hours, but usually takes only 1 to 3 hours. While you wait, step through the screens that appear. If applicable, you will be given the opportunity to select your language just before the Welcome screen appears. When you see the Welcome screen, you know your device has been activated:

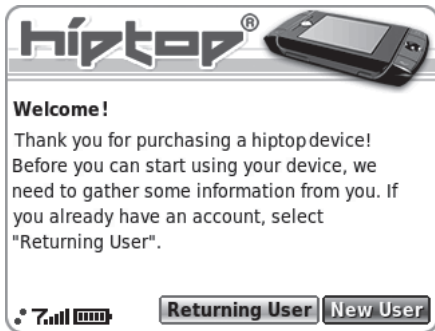


Press the trackball  to select the **New User** and advance to the next screen. On subsequent screens, select **Next** to advance.

- 2 Congratulations** – Once your account has been set up, you'll see the Congratulations screen: Select the Start button to begin!

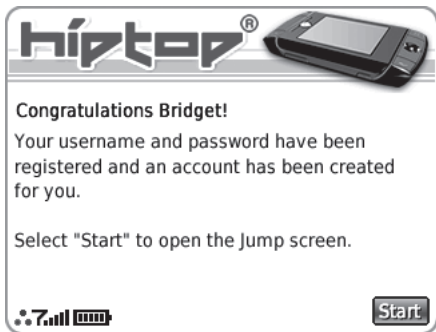

display


To open your display, hold your device securely with both hands, then push up on the display with your thumbs. The display springs smoothly into the open position. The normal operating position of the device is horizontal, with the trackball on the right.

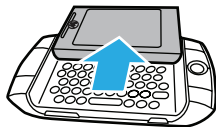


To close your display, push the display down.

Tip: To protect your display always use your carrying case.

make a call



To make a call, from the Jump screen or Phone screen, open the display and enter a phone number then press .

Tip: You can also use the dial pad by selecting  from the Phone screen.

To “hang up,” select **End** or press and hold .

Note: When using the stereo headset to make a call press the send key on the headset.

answer a call

To answer a call, when your device rings select **Answer** or press . To “hang up,” select **End** or press and hold .



Note: When using the stereo headset to answer a call press the send key on the headset.

store a phone number

Find it:  > **Address Book** >  > **New Contact**

You can store a phone number in your **Address Book**:

- 1 Enter your contact's details. You only need to enter basic “identity” information, a **First** or **Last** name.


- 2 When you have finished entering “identity” information select **DONE** or press .
- 3 Scroll through the **New Contact** fields (such as **Personal Info**, **Phone**, and **E-mail**) and select **Add** or **Edit** to enter additional contact information.
- 4 When you have finished entering additional contact information select **DONE** or press .

Note: The contact details are stored on your device's memory.

For further **Address Book** details, see page 41.



call a stored phone number

Find it:  > **Phone**

- 1 Scroll to and select **Look Up**.
- 2 Enter a name to narrow your search.
- 3 Scroll to and highlight the phone number, then press  to call.



your phone number

To see your phone number from the Jump screen:

Find it:  > Phone >  > Settings > General > My Phone Number

basics


See page 2 for a basic device diagram.


Tip: Want some help? Press  >  > **Help** > **Owner's Manual**.


device interface


jump screen

The Jump screen is your entry point to all device applications. Application selections are arranged on the left side of the screen in a “ring”. Some applications are grouped into a second-level folder.


Press  to open your Jump screen:

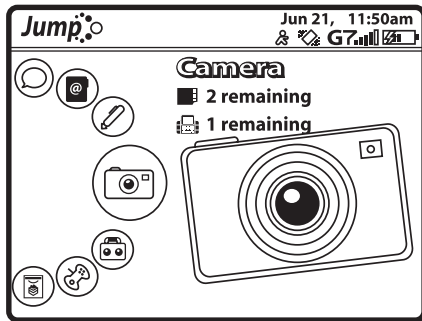




If you press  while on the Jump screen, you can open all the device **Settings** options and other feature settings, such as **Bluetooth**.

To select an application, scroll through the “ring” of application icons. When the application or application folder you want is highlighted, press the trackball  to open that application or to enter the second-level application ring.

menus

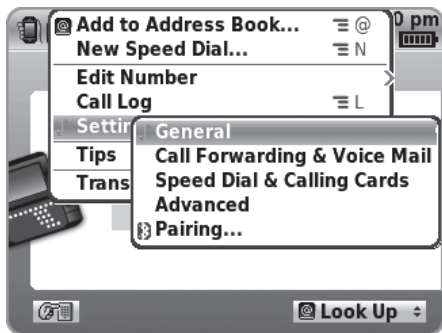
To open the menu from any screen press . Menu items with submenus are shown with a right pointing arrowhead. The Phone Settings submenu is shown expanded:




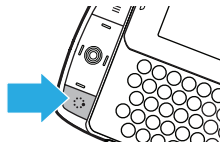
Frequently used menu items have keyboard shortcuts that use the menu key () plus a shortcut key, such as  + **L** for **Call Log**.

basic navigation


jump key

Press  to open your Jump screen.

You can press  at any time to return to the Jump screen.






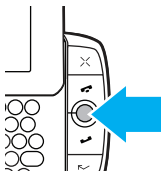
menu key

Press  to open the menu options for the current screen.




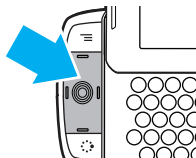
trackball key

Scroll the trackball  up, down, left, or right to scroll to items in the display. When you scroll to an item, press the trackball  to select it. To adjust the vertical and horizontal speed of the trackball press  > **Settings** > **Trackball**.






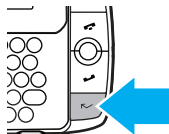
directional pad

Press the *directional pad*  up, down, left, or right to scroll to items in the display.




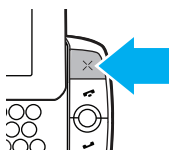
done key

Press the *done* key  to return to the previous screen until you reach the Jump screen. On a screen or in a dialog box, press  to save your changes and dismiss the screen or dialog box. If a menu is open, press  to close it.





cancel key


Press the *cancel* key  to dismiss the changes you have made to a screen or dialog box.



quick jump

To jump to a pending message or an application you have used recently, press  + . Select **Recent** (recently-used applications) or **Pending** (messages you have not read yet).

Note: You can use the shortcuts listed to go directly to that application or message.

Tip: Press  + **O** to open the latest unread message.



phone controls

See page 2 for phone controls diagram.


keyboard

Use the keyboard to enter characters.




send key

Press  to call the phone number you have entered or highlighted in a list. Press  with no number entered to show dialled numbers. When this key is not lit you can use it to page down.

end key


During a call press  to end the call or clear the screen of the number you have entered. When this key is not lit you can use it to page up.

left and right shoulder keys

The functions of these keys depend on which application you are using. For example, when using the **Camera**, the right shoulder key  captures a photo. When using the **Phone**, the left shoulder key  turns **Mute** on and off, and the right shoulder key  turns **Speakerphone** on and off.

volume keys


Press and hold the + or - volume keys to step through your Sound Profiles or to increase and decrease the volume of the application you are currently using. During a call use the volume keys to increase or decrease the volume.

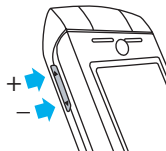

Note: To mute your device, press and hold the - volume key.

title bar and indicators

The device display indicators are:

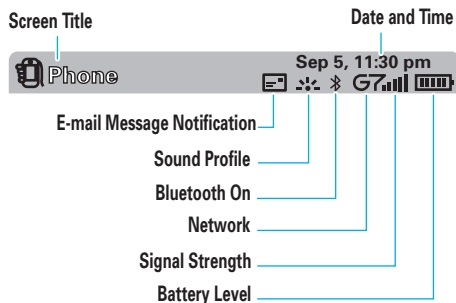

- 1 Signal Strength Indicator** – Vertical bars show the strength of the network connection. Network services such as calls may not be available when you see an X flashing over the radio tower icon.

- 2 Network Indicator** – Shows when your device is connecting to GPRS/EDGE network:



device is connecting to the GPRS/ EDGE network



connected to the GPRS/EDGE network



not connected to the GPRS/ EDGE network. You can only make phone calls.



Phone is only able to make emergency calls.

- 3 Bluetooth Indicator** – Shows current Bluetooth status:



Bluetooth on

- 4 Phone Calls Indicator** – A timer appears when you have a call in progress:

3:40 = call time elapsed is 3 mins, 40 secs.

◀ = call forwarding is turned on. Your phone will not ring.

If you have two calls active, the time displayed is for the foreground call.

- 5 Communication Services Notifications** –

Shows when you receive a new message, or when a Web page has finished loading. Indicators may include:


 = E-mail message

 = SMS

 = loaded Web page



- 6 Sound Profile Indicator** – Your current Sound Profile is displayed:

 = totally silent (no sound, no flashing lights, no vibration)

 = flashing lights only

 = vibration only


- 7 Battery Level Indicator** – Vertical bars show the battery charge level. Indicators may include:

 = empty

 = charging

 = too hot

 = too cold

- 8 Memory Card Activity Indicator** – When data is being written to or from your memory card, you will see this icon () flashing.

9 USB Connector Icon – When your device is connected to your computer using the USB port, you will see (USB).

Note: When your device is attached to your computer via USB, you cannot view the contents of your memory card from your device.

text entry

Some features let you enter text. In a text entry screen use the keyboard to enter your text. For advanced text entry features see page 54.

autotext

Find it:  >  > **Settings** > **AutoText**



The **AutoText** function offers automatic formatting and word replacement options. Open the menu to discard or create AutoText rules.


When typing, words are replaced only after you press the space bar.



Quickly insert your E-mail address, date, time, or phone number by using these AutoText rules:


- Enter **@E-mail** to insert your E-mail address.
- Enter **@Id** to insert the current day and date.
- Enter **@It** to insert the current time.
- Enter **@phone** to insert your phone number.


key guard

To lock your keyboard and controls press  >  > **Key Guard**. The key guard screen appears.

Tip: Press and hold  to lock your keyboard and controls quickly.

To unlock your keyboard and controls press  + . If you have set a privacy code you will be prompted to enter it.


Your device turns the key guard on automatically after being idle for five minutes. To change this setting press  > **Settings** > **Key Guard & Security**.

Tip: To turn on the backlight when the key guard is on hold .

After your device has been in key guard mode for five minutes the screen will switch off. Press any key or open the display to wake your device.

Tip: The key guard is turned off when the display is opened.

handsfree speaker

You can use your device's handsfree speaker to make calls without holding the device to your ear. To turn the handsfree speaker on and off during a call, press the right shoulder key .

customise



sound profiles

Each sound profile defines the volume of rings, reminders, and system sounds. You can have up to eight profiles; six editable profiles are provided by default.


To create a new profile or modify an existing profile:

Find it:  >  > **Settings** > **Sound Profiles**



changing ringtones

Find it:  > **Phone** >  > **Settings** > **General**

- 1 Highlight the **Incoming Call Ringtone** pop-up menu, then press the trackball . The ringtone categories are shown.

Highlight a category, then press the trackball  to open the ringtones submenu. Scroll through the

sounds, you can preview each sound by hovering over it for a few seconds.

Press the trackball  to select the ringtone you want and then press .

applications

You can set application-specific preferences using the **Settings** options found within the applications.

Find it:  > *application* >  > **Settings**

backgrounds

You can customise the background on all application splash screens.

Find it:  >  > **Backgrounds**

font size

You can change your font size settings:

Find it:  >  > Settings > Font Size



display backlight

Find it:  >  > Settings > Battery & Display > Display Backlight

Select the **Dim after** pop-up menu and select a timeout option, up to five minutes.

display backlight brightness

Find it:  >  > Settings > Battery & Display > Brightness

Press the trackball  to open the slider for adjustment. Scroll the trackball  right and left to increase and decrease brightness.

Tip: If you select **Use ambient light sensor** the brightness will automatically adjust to the surrounding light conditions.

date & time

To set the date and time:

Find it:  >  > Settings > Date & Time



calls

To make and answer calls, see page 23.

call log


Your device keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. A record of recent numbers can be viewed.

Find it:  > Phone > Recent > Call Log

Scroll to a call to see call details (like time and date). To call the number, press  or the trackball .

return a call

Your device keeps a record of your unanswered calls, and shows **You missed X phone calls**, where **X** is the number of missed calls.

When you see the **You missed X phone calls** message, use the trackball to scroll to the call you want to return, then press .

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your device's display.



Your device shows the caller's name and picture when they're stored in your address book, or **Phone Call** when caller ID information isn't available.

Note: Picture IDs aren't available for contacts stored on the SIM card.

Tip: Want to know who's calling without even looking at your device? To give one of your contacts a special ringtone, see page 57.

To show or hide **your phone number** for all calls:


Find it:  > Phone >  > Settings > Advanced > Caller Id

emergency calls

Your service provider programs one or more emergency phone numbers, such as 000, that you can call under any circumstances, even when your device is locked or the SIM card is not inserted.

Note: Check with your service provider, as emergency numbers vary by country. Your device may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues. Do not solely rely on your wireless device for essential communications such as medical emergencies.

To make an emergency call:


- 1 From the Jump screen or Phone screen, press the keyboard keys to dial the emergency number.
- 2 Press  to call the emergency number.

voice mail



Your network stores the voice mail messages you receive. To listen to your messages, call your voice mail number.




Note: Your service provider may include additional information about using this feature.

When you **receive** a voice mail message, your device plays the message alert and displays the new message indicator .

To **check** voice mail messages:

Find it:  > Phone > press and hold 

Shortcut: Your service provider may store your voice mail phone number in speed dial location #1. If so, you can press and hold  in the Phone screen to listen to your voice mail message(s).

applications


The applications available on your device may vary depending on your Service Provider.




mini music player

Find it: Press  + 



Your music player can play MP3, WAV, MIDI, WMA, AAC (MP4) music files. Use the mini music player and SonicBOOM music player to play files you have stored on your microSD card. Use the mini music player to control your music while using other applications, such as E-mail or Instant Messaging.

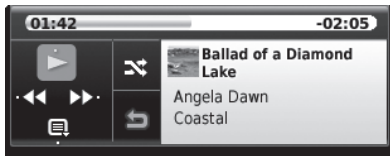Once the mini music player is displayed use the trackball or directional pad to highlight a control, then press the trackball  to perform the action:





Select:

- **Play**  or **pause**  or 
- **Play previous**  or 
- **Play next**  or 
- **Shuffle** 



- **Loop once** 
- **Loop repeatedly** 

select songs


To **scroll through the songs** in the **Play Queue**:

- 1 Scroll the trackball down and select .
- 2 Press the directional pad left or right or select  to scroll through the songs in your queue.


volume controls

- 1 Press  + .
- 2 Scroll the trackball left or right to change your sound profile. Left increases the volume and right reduces the volume.

Tip: You can also use the device volume keys.




If you are playing a song or on the phone, the volume control panel includes separate volume controls for the music or phone call.

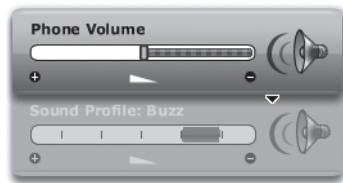


Note: Your music will be paused during a phone call.



play music

Find it:  > SonicBOOM

Your music is organised in categories on the **Browse Music** screen. Scroll to highlight a category press  to select it.



To play music, select the category or song you want to play and it will be added to the "Play Queue". The songs play in the list order. Press  > **Shuffle & Repeat** then the option you want **Shuffle**, **Repeat**, **Repeat once**, or **Repeat the Play Queue**.


To control song play open the mini music player (see page 38).


Tip: To play your selection immediately press  + **P**.
To add a song to the “Play Queue” press  + **Q**.

create a playlist

To create a playlist:

- 1 In the **Browse Music** screen, select one of the categories, then select a song, artist, or album you want in your playlist.
- 2 With the song, artist, or album highlighted press  and select **Add to Playlist > New Playlist**.
- 3 Enter your new playlist name and press  to save your changes.

To add songs to a playlist, highlight a song, artist, or album, and press  and select **Add to Playlist > Playlist Name**.

To remove songs from a playlist, open the playlist and highlight a song. Press  and select **Remove from Playlist**.

camera

Your device has a built-in 1.3 megapixel camera. You can store up to 1.75 MB of photos on your device's internal memory and more on your microSD card.

Find it:  > Camera

take a photo




Press  > **Capture New** or press  to see the viewfinder:

3 remaining
1280 x 1024




Capture photo



To take your photo, press  or use the trackball to select the capture icon . The photo preview appears on the display:

- Press  to discard the photo.
- Press  to save the photo.
- Select  to send it via an E-mail or Multimedia message.

Before you take your photo you can:

- Press  and select **Large (1280 x 1024)**, **Medium (640 x 480)**, or **Small (320 x 240)** to set the photo size.
- Select  to set the exposure.
- Select where your photo will be saved. By default, your photo will be saved to the **Memory Card Album**. To save to your device, press  > **Capture to** > **Device Album**, or another album you created on the memory card.

address book




You can manage the details of up to 2000 contacts in your **Address Book**.


For more address book features, see page 56.

create a contact

You can store phone numbers, E-mail addresses, postal addresses and much more for each contact in your address book.

Find it:  > **Address Book** >  > **New Contact**

- 1 Enter your contacts details. You only need to enter basic “identity” information, a **First** or **Last** name. You can also add a **Middle** name, **Nickname**, icon or photo. Select  to insert an icon, select  to insert a photo.
- 2 When you have finished entering “identity” information select **DONE** or press .
- 3 Scroll through the New Contact fields (such as Personal Info, Phone, and E-mail) and select **Add** or **Edit** to enter additional contact information.

- 4 When you have finished entering additional contact information select **DONE** or press .

Note: The contact details will be stored on your device's memory.

import contacts from your SIM

Import the phone numbers you have stored on your SIM card into your device's **Address Book**:

Find it:  > **Address Book** >  > **Settings** > **Import SIM Contacts**

import address book contacts

If you have existing contact information stored in a Personal Information Management (PIM) application, you can import that data to your Address Book on the device and Web. To do this, first go to your Address Book on the Web:

- 1 Sign in to the Desktop Interface—go to www.hiptop.com.au.
- 2 Click the link to the Address Book.

- 3 Select **Import** from the Address Book sidebar and follow the instructions.


Select **Import** and follow the instructions. These file types can be imported:

- Microsoft Outlook for PC (.txt file)
- Microsoft Outlook Express for Mac (.txt file)
- Microsoft Entourage for Mac (.txt file)
- Palm Desktop for PC (.txt/.tab file)
- Palm Desktop for Mac (.txt/.tab file)

After you select **Import**, your contacts are imported to your Web Address Book then sent to your device via the network. Make sure your device has a wireless connection then after a few minutes, check your device to confirm that your new contacts have been imported.

communicate with a contact




Find it:  > **Address Book**

Use the trackball to highlight a contact and then press and hold the trackball .

A menu opens that lists all the communication options available for that contact. Select the option you want.

set and send My vCard

Find it:  > Address Book

- 1 Use the trackball to highlight the contact you want to set as your vCard, then press  > **vCard** > **Set as My vCard**. This  icon is displayed next to the contact you selected.
- 2 To send your vCard, from the **Browse Contacts** screen, press  > **vCard** > **Send My vCard** > **via E-mail**, or **Text**, or **Bluetooth**.

Note: To remove the “My vCard” setting, press  > **vCard** > **Clear My vCard**.

send a contact's vCard

Find it:  > Address Book

Use the trackball to highlight the contact whose vCard you want to send.

Press  > **Contact** > **vCard** > **Send Contact's vCard** > **via E-mail**, or **via Text**, or **via Bluetooth**.

messaging


You can send and receive SMS, MMS, and E-mail messages from the messaging feature. For advanced messaging features, see page 58.

send an sms


Find it:  > Phone Messaging > SMS >  > New Message

- 1 Select **To** to add a recipient. Enter the recipient's number or start entering their name to show **Address Book** matches.
- 2 Scroll to the **Compose** field and press the keyboard keys to enter text on the page (for details about text entry, see page 32).

To insert a prewritten message select , to insert a smiley select , to attach a vCard press  and select **Attach vCard**.

- 3 When you finish the message, select **Send** or press  + **M**.

receive an sms

When you receive a new sms, your device plays an alert. Also, the you will see a visual “balloon” notification move across the title bar and then the sms indicator  is displayed.

To see all of your sms:





Find it:  > Phone Messaging > SMS > Inbox

Tip: You can use the trackball to scroll between folders, such as **Inbox**, **Drafts**, **Sent**, and **Trash**.



send a multimedia message

Find it:  > Phone Messaging > Multimedia Messaging >  > New Message

- 1 Select **To** to add a recipient. Enter the recipient's number or start entering a name to show **Address Book** matches.
- 2 Scroll to the **Compose** field and press the keyboard keys to enter text (for details about text entry, see page 32).

- 3 To add a voice recording select , to add an image select , to add a sound select , or to add another slide select . You can have up to three slides.


Tip: Use the sec(s) pop-up menu to select how long you want the slide to play.


- 4 Select **Preview** to view your message before you send it. You can edit the attachments from the **Compose** screen, highlight the attachment, then press and hold the trackball  to bring up the edit options.
- 5 When you finish the message, select **Send** or press  + **M**.


send an E-mail

Find it:  > E-mail >  > New Message


- 1 Select **To** to add a recipient. Enter the recipient's name or E-mail address. If you enter a name (that's stored in your **Address Book**) the E-mail address will be shown.

- 2 Scroll to the **Subject** field and press the keyboard keys to enter text (for details about text entry, see page 32).
- 3 Scroll to the compose field and press the keyboard keys to enter text on the page.
- 4 Press  > **Attach** to add a photo, sound, or vCard attachment.

Tip: To open your photo albums press  and scroll to and select the photo you want to send.

- 5 When you finish the E-mail, select **Send** or press  + **M**.

receive an E-mail

When you receive an E-mail message, your device plays an alert. Also, you will see a visual “balloon” notification move across the title bar and the E-mail message indicator  is displayed.




To see all of your E-mail messages:



Find it:  > **E-mail** > **Inbox**

fetch E-mail from external accounts

When you register your device account, you automatically receive an E-mail account that you can use immediately on either your device or the E-mail application on the Desktop Interface. In addition, you can fetch E-mail from up to three external POP3 or IMAP E-mail accounts.

At this time, E-mail from MSN Hotmail® and E-mail servers that are protected by a firewall do not allow E-mail to be fetched by other servers. You can, however, check some Internet E-mail accounts by using the Web Browser, see “fetch E-mail using Web browser” on page 46.

Find it:  > **E-mail** >  > **Settings** > **Accounts**

- 1 Press  > **New Account**.
- 2 Enter your E-mail account information. These settings should be available from your E-mail service provider.
- 3 To save select **Create** or press .


- 4 Wait until you receive a confirmation message on the E-mail screen before attempting to send messages from this E-mail account.

fetch E-mail using Web browser



If there is a Web interface to your E-mail account, you can use your device's Web Browser application to sign in to those accounts and check your E-mail. Here are a couple of popular E-mail Web sites:

Yahoo!® Mail - <http://mobile.yahoo.com/home>

MSN Hotmail® - <http://mobile.msn.com/hm/folder.aspx>

Press  + K to open the Bookmarks screen. Some sites may have been bookmarked for you.

To go directly to an E-mail Web site:


- 1 Press  > **Web Browser**.
- 2 Enter the URL (Web site address) for your Internet E-mail account. Your entry will be inserted in the **Go To** dialog box automatically.
- 3 Press the trackball  to go to the Web site's sign in page.

Web browser

browse the Web

Find it:  > **Web Browser**

- 1 Enter the address of the Web page you wish to visit. The **Go To** dialog box opens automatically, showing the address you are typing. Possible URL matches, and the option to search for the text you entered, appear in the drop-down menu.
- 2 To go to a Web page, you can either finish typing the complete URL in the **Go To** dialog box then press Return, or use the trackball to highlight and select a suggested URL in the drop-down menu.

Tip: To open Web pages faster, press  > **Settings**. Clear the "Show pictures" check box.

bookmark a Web page

Find it:  > **Web Browser**

- 1 Press  + **N** to open the **Add Bookmark** dialog box.

Edit the bookmark name if you wish, verify the URL and select a folder in which to store the bookmark from the **Folder** pop-up menu.

- 2 Press  to save the bookmark.

BigPond Catalogue®

Download ringtones, applications, games, themes, and more from the BigPond Catalogue! You'll find that browsing the BigPond Catalogue and purchasing items is easy and fun.


Find it:  > BigPond Catalogue

manage your downloaded items



Manage your downloaded items from one place:

Find it:  > BigPond Catalogue > Downloads

instant messaging


Find it:  > Instant Messaging

sign in

- 1 Press the trackball  to open the second-level ring of applications. Highlight the IM application of your choice, then press the trackball  to go to the sign in screen.
- 2 Enter your username and password (passwords are case-sensitive), then select **Sign In**.

Note: You will need to have already set up an IM account.

send an instant message



- 1 To start a conversation with a friend on your list, highlight the friend's username, then press the trackball  to start a conversation.
- 2 Enter your message. When ready, press the Return key to send.







calendar

You can create and store up to 1000 events in your Calendar.

Find it:  > Planning > Calendar


add an event

- 1 Press  > **New Event**.
- 2 Enter event details as required (name your event, enter a location, assign a duration, add repetitions, reminders, and notes).
- 3 Press  to save your event.



Tip: To view your schedule, select one of the **Views** from the menu. Each view has a keyboard shortcut: **Upcoming** ( + **0**), **Day** ( + **9**), **Week** ( + **8**), **Month** ( + **7**), **Year** ( + **6**), or **Trash** ( + **T**).

notes

You can create and store up to 50 notes. Each note can contain up to 8000 characters.

Find it:  > Planning > Notes




create a note

- 1 Press  > **New Note**.
- 2 Enter your note details. Your note is saved as you enter it.
- 3 Press the trackball  to fold or unfold your note.

Tip: A folded note is locked.

send a note

You can send a note by E-mail.



- 1 Create a new note or highlight an existing note.
- 2 Press  > **Send Note** or  + **M**.
- 3 Complete the E-mail message then, press **Send** or  + **M**.

to do

You can create and store up to 50 to do tasks.

Find it:  > Planning > To Do

add a task

- 1 Press  > **New Task**.
- 2 Enter your task information.
- 3 Press  to save your task.


connections

desktop interface

Your data stored in your device's E-mail, To Do, Calendar, Address Book, Notes, and Camera applications is also available for viewing or editing on the Web from any computer connected to the Internet. Information in your account is stored on servers in a data centre with enhanced security and firewall features.

Go to www.hiptop.com.au for details on signing into the Desktop Interface.

Once you have signed in, your Jump page will open:

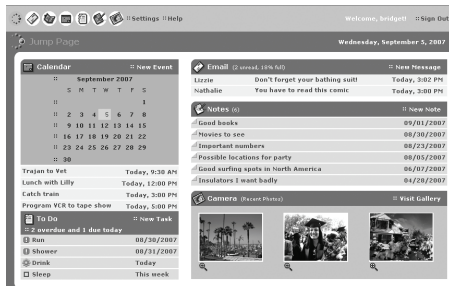

Note: When you have finished using the Web applications, always select **Sign Out** to exit the Web site securely.

Use the Jump page navigation buttons to open the various applications:



Select **Help** to open the online Help.

Import existing contacts from the **Address Book > Import** import existing Calendar events from the **Calendar > Import** page.

Synchronise your Address Book, Calendar, and To Do items with Microsoft Outlook by purchasing and downloading the Intellisync application. Select **Settings** then **Sync** tab and follow the instructions.


Change your default language or time zone by clicking **Settings**.


connect your device to a computer

You can use a USB cable or a Bluetooth connection to connect your device to a computer.

Note: The unauthorised copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

cable connection

 Your device has a mini-USB port so you can connect it to a computer to transfer data.

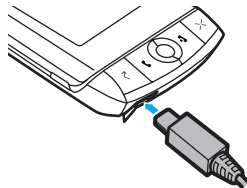

Note: Motorola Original USB data cables and supporting software may be sold separately. Check your computer or hand-held device to determine the type of cable you need.



On your device:

Connect the cable to your device and to an available USB port on your computer.

On your computer:

- 1 Open your “My Computer” window, where your device’s memory card appears as a “Removable Disk” icon.
- 2 Click on the “Removable Disk” icon to access the files on your device’s memory card.
- 3 To store the desired files onto the memory card, drag and drop them as follows (you may need to create the folder structure on your memory card):
music:
> Music
pictures:
> DCIM

- 4 When you finish, disconnect your device by selecting the “Safely Remove Hardware” icon in the system tray at the bottom of your computer screen. Then disconnect the “USB Mass Storage Device.”
- 5 Disconnect the cable from your device and computer.

Bluetooth® wireless

Your device supports Bluetooth wireless connections. You can connect your device with a Bluetooth audio device, such as a handsfree headset. For advanced Bluetooth features see page 60.

Note: The use of wireless devices while driving may cause distraction. Discontinue a call if you can’t concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.





For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.

use a handsfree or other Bluetooth device


Before you try to connect your device with a handsfree or other Bluetooth device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device).

Find it: Press  >  > **Bluetooth** > **Turn Bluetooth On**


Your device is now ready to be paired:

- 1 Press  > **Phone** > **Settings** > **Pairing**, then scroll to a device in the list and press the trackball .
- 2 If necessary, enter the device passkey (such as 0000) and then press .
- 3 By default, your call's sound will go through the device handset. To send or receive your call using a Bluetooth device, press  > **Transfer Sound to**, then select your Bluetooth device from the submenu or press the send/end key on the


Bluetooth device. If a BT Headset is successfully connected and paired to the Motorola Q700 hiptop slide, it will use the Headset by default for the call not the Handset.

When your device is connected, the Bluetooth indicator  is highlighted in the status bar.

send My vCard

If you have set "My vCard" in your Address Book (see "set and send My vCard" on page 43), you can send your vCard quickly to another Bluetooth device by pressing  then **Y**.

If your device could not send the file to the other device, make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.

Note: Once you connect your device to a Bluetooth device, that device can start similar Bluetooth connections with your device. Your display shows the highlighted Bluetooth indicator  in the status bar when there is a Bluetooth connection.

other features

advanced calling

features

international calls



If your phone service includes international dialling, press and hold **0** to insert your local international access code (indicated by +). Then, press the keyboard keys to dial the country code and phone number.

hold a call

Press  > **Hold Call** to put all active call on hold.

call waiting



When you're on a call, you'll see options to **Switch Calls** or **Ignore** if you receive a second call.

Select **Switch Calls** to answer the new call.

advanced text features

features

delete text left of the cursor

Press the DELETE key.

delete text right of the cursor

Press  + DELETE.

delete all text on a line

Press ALT + DELETE.


features




navigate in text boxes

Use the keys and keyboard to navigate within a text box, press:

The directional pad or scroll the trackball left/right to move character-by-character.

ALT + directional pad or trackball left/right to jump to the beginning/end of a word.



 + trackball left/right to jump to the beginning/end of a line.

 +  or  to jump to the beginning/end of text in a text box.

features

cut, copy, paste, undo


Press and hold the SHIFT key while pressing the directional pad or trackball in the required direction. As you select text, it is highlighted.

Press  and select **Edit Text** to open the Edit Text submenu, or simply press and hold the trackball  to open the **Edit Text** context menu. Select the operation you want to perform on the selected text.

Note: Your device's clipboard only stores one set of copied or cut text at a time.

features

special characters

To enter special characters in any text box, press the SYM key. The Special Character selector opens, displaying special characters. Use the directional pad or trackball to navigate through the list: left-right to flip through the Favourites, Recent, alphabet, and symbol sets; up-down to select specific characters. Press the trackball  to insert a highlighted character.

To type a character using its Unicode value (hover over a selection to see the Unicode value), press SYM and the space bar simultaneously, then enter the four-character Unicode value.




address book

To store and call contacts entries, see page 24.



features

add a number to your speed dial list

Find it:  > Phone >  > New Speed Dial

You can assign the keys  through  to speed dial entries. Select a speed dial key from the pop-up menu. Only the numbers available will appear in the pop-up menu. Enter the speed dial Name and Number, then press .

use speed dial to make a call

From your Jump screen or Phone screen press  and select **Speed Dial**, then select the number and press  or press and hold a speed dial key from the Phone screen.

features

edit a contact's entry

Edit a number stored in the contacts:

 > Address Book

Select the contact entry you want to edit and press

 > Edit Contact



discard a contact's entry

 > Address Book

Select the contact entry you want to discard and press  > Discard Contact

set custom ringtone for a contact's entry

Assign a custom ringtone to an entry:

 > Address Book > *contact* >  > Edit Contact > Phone > Custom Ring

features

set image for a contact's entry

Assign a photo or picture to show when you receive a call from a contact:

 > Address Book >  > Edit Contact > Edit Identity > 

set category for a contact's entry

 > Address Book >  > Edit Contact > Category



sort contacts list

Set the order in which entries are listed:

 > Address Book >  > Sort

copy contact to SIM card

Copy an entry from the device to the SIM card:

 > Address Book >  > Copy to SIM Card

messaging

For basic messaging features, see page 43.

Your device reads message settings from the SIM card.

features

read and manage sms



 > Phone Messaging > SMS > Inbox


Select message and press  then select **Reply**, **Forward**, **Call Back**, or **Discard**.

To open a message, press the trackball .

read and manage E-mail



 > E-mail > Inbox

Select E-mail message and press  then select **Reply**, **Forward**, or **Discard**.



To open an E-mail, press the trackball .

device settings

features

location


Set time zone location:

 >  > Settings > Date & Time > Time Zone

language

Set language for your device:

 >  > Settings > Locale

All available locales are listed in the **Language** pop-up menu. Select the language you wish to set and press .


Note: You must restart your device for language changes to take effect.

features

Keyboard mapping

Set keyboard mapping for your device:

 >  > Settings > Locale

All available locales are listed in the **Keyboard Mapping** pop-up menu. Select the language you wish to set and press .

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing the End key. This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features

call times



Show call timers:

 >  > Settings > Network Status > Voice

network

Note: To make any call, including an emergency call, the network setting for your device must be the same as the local wireless network. For example, in the United States, set your phone to the CDMA account. In Europe, set the device's network to GSM.

features

network settings



See network information settings:

 >  > Settings > Network Status


To adjust network information settings:

 >  > Settings > Network Options

games

features

games

 > Games

airplane mode

features

airplane mode

You can switch your device to airplane mode to prevent it from communicating with the network. This lets you play music, games, or other applications while you are on an airplane, without interfering with airplane communications.

Note: Your device cannot make Bluetooth® connections when **Airplane Mode** is on.

Press  and select **Airplane Mode > Turn Wireless Off**.

advanced Bluetooth features

features

change your device's name

 >  > Bluetooth > My Device > Name



make device visible to other devices

Allow a Bluetooth device to discover your device:

 >  > Bluetooth > Always Visible or Visible for 60sec



make device invisible to other devices

 >  > Bluetooth > Never Visible





memory card

For basic information on the memory card, see page 18.

features

memory card name, available memory, and other information

To see your **memory card name, available memory, and other information** about the card:

 >  > Memory Card

rename memory card

 >  > Memory Card > Card Name

service & repairs

If you have questions or need assistance, we're here to help.

Go to www.telstra.com.au or www.motorola.com/consumer/support, where you can select from a number of customer care options.

You can also contact Telstra Customer Service at 125 111 or Motorola Customer Support centre at 1 300 138 823 (Australia).

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear is 0.74 W/kg.¹ As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user's guide.² In this case, the highest tested SAR value is 0.87 W/kg.¹

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "handsfree" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
2. Please see the *Safety and General Information* section about body worn operation.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

Privacy and Data Security

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device which updates the device's security, install it as soon as possible.
- **Erase before recycling**—Delete personal information or data from your mobile device prior to disposing of it or turning it in for recycling.
- **Understanding AGPS**—In order to comply with emergency caller location requirements of the FCC, certain Motorola mobile devices incorporate *Assisted Global Positioning System* (AGPS) technology. AGPS technology also can be used in non-emergency applications to track and monitor a user's location—for example, to provide driving directions. Users who prefer not to permit such tracking and monitoring should avoid using such applications.

If you have further questions regarding how use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Microsoft End User License Agreement

You have acquired a device ("DEVICE") that includes software licensed by Motorola, Inc. ("Motorola") from Microsoft Licensing Inc. or its affiliates ("Microsoft"), for use in connection with wireless network services provided under separate agreement between you and a wireless telecommunications provider ("Mobile Operator"). Those installed software products of Microsoft origin, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by international intellectual property laws and treaties. SOFTWARE includes software already installed on the DEVICE ("DEVICE Software") and Microsoft software contained on any CD-ROM disk accompanying the DEVICE ("Desktop Software").

The SOFTWARE is licensed, not sold. All rights reserved.

IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT ("EULA"), DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT MOTOROLA FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

1. GRANT OF SOFTWARE LICENSE. This EULA grants you the following license:

1.1. DEVICE Software. You may use the DEVICE Software as installed on the DEVICE (including as installed on removable media installed in the DEVICE). All or certain portions of the DEVICE

Software may be inoperable if a proper account is not established or maintained with an appropriate Mobile Operator, or if the Mobile Operator's network facilities are not operating or configured to operate with the DEVICE software.

1.2. Desktop Software. Desktop Software is included with your DEVICE, and you may install and use the Microsoft ActiveSync® 3.7.1 component on one (1) or more computers to exchange information with one (1) or more computing devices that contain a compatible version of the Microsoft Windows® for Smartphone 2003 Software. For other software component(s) contained in the Desktop Software, you may install and use such components only in accordance with the terms of the printed or online end user license agreement(s) provided with such component(s). In the absence of an end user license agreement for particular component(s) of the Desktop Software, you may install and use only one (1) copy of such component(s) on the DEVICE or a single computer with which you use the DEVICE.

1.3. Back-up Copy. If Motorola has not included a back-up copy of the DEVICE Software with the DEVICE, you may make a single back-up copy of the DEVICE Software. You may use the back-up copy solely for archival purposes.

1.4. Microsoft Windows® 2003. If Microsoft Outlook® 2002 is included with your Device, the following terms apply to your use of Microsoft Outlook® 2002: (i) regardless of the information contained in "Software Installation and Use" section of the online

EULA you may install one (1) copy of Microsoft Outlook® 2002 on one (1) computer to use, exchange data, share data, access and interact with the DEVICE, and (ii) the EULA for Microsoft Outlook® 2002 is between Motorola and the end user - not between the PC manufacturer and end user.

2. Speech/Handwriting Recognition. If the Software includes speech and or handwriting recognition component(s), you should understand that speech and handwriting recognition are inherently statistical processes; that recognition errors are inherent in the processes; that it is your responsibility to provide for handling such errors and to monitor the recognition processes and correct any errors. Neither Motorola nor its suppliers shall be liable for any damages arising out of errors in the speech and handwriting recognition processes.

3. Limitations on Reverse Engineering, Decompilation and Disassembly. You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

4. Single DEVICE. The Device Software is licensed with the DEVICE as a single integrated product. The DEVICE Software may only be used as part of the DEVICE, notwithstanding any installation of the DEVICE Software on removable media.

5. Single EULA. The package for the DEVICE may contain multiple versions of this EULA, such as multiple translations and/or multiple media versions (e.g., in the user documentation and in the software). Even if you receive multiple versions of the EULA, you are licensed to use only one (1) copy of the DEVICE Software.

6. Rental. You may not rent or lease the SOFTWARE.

7. Software Transfer. You may not permanently transfer any of your rights under this EULA with regard to the DEVICE Software or Desktop Software, except as permitted by the applicable Mobile Operator. In the event that the Mobile Operator permits such transfer, you may permanently transfer all of your rights under this EULA only as part of a sale or transfer of the DEVICE, provided you retain no copies, you transfer all of the SOFTWARE (including all component parts, the media and printed materials, any upgrades or backup copies, this EULA and, if applicable, the Certificate(s) of Authenticity), and the recipient agrees to the terms of this EULA. If the Software is an upgrade, any transfer must include all prior versions of the SOFTWARE.

8. Termination. Without prejudice to any other rights, Motorola or Microsoft may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.

9. Security Updates. The SOFTWARE may include digital rights management technology. If SOFTWARE does contain digital rights management technology, content providers are using the digital rights management technology ("Microsoft DRM") contained in the SOFTWARE to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. Owners of such Secure Content ("Secure Content Owners") may, from time to time, request Microsoft, Microsoft Corporation or their subsidiaries to provide security related updates to the Microsoft DRM components of the SOFTWARE ("Security Updates") that may affect your ability to copy, display and/or play Secure Content through Microsoft software or third party applications that utilize Microsoft DRM. You therefore agree that, if you elect to download

a license from the Internet which enables your use of Secure Content, Microsoft Corporation or their subsidiaries may, in conjunction with such license, also download onto your DEVICE such Security Updates that a Secure Content Owner has requested that Microsoft, Microsoft Corporation or their subsidiaries distribute. Microsoft, Microsoft Corporation or their subsidiaries will not retrieve any personally identifiable information, or any other information, from your DEVICE by downloading such Security Updates.

10. Consent to Use of Data. You agree that Microsoft, Microsoft Corporation and their affiliates may collect and use technical information gathered in any manner as part of product support services related to the SOFTWARE. Microsoft, Microsoft Corporation and their affiliates may use this information solely to improve their products or to provide customized services or technologies to you. Microsoft, Microsoft Corporation and their affiliates may disclose this information to others, but not in a form that personally identifies you.

11. Internet Gaming/Update Features. If the SOFTWARE provides, and you choose to utilize, the Internet gaming or update features within the SOFTWARE, it is necessary to use certain computer system, hardware, and software information to implement the features. By using these features, you explicitly authorize Microsoft, Microsoft Corporation and/or their designated agent to use this information solely to improve their products or to provide customized services or technologies to you. Microsoft or Microsoft Corporation may disclose this information to others, but not in a form that personally identifies you.

12. Internet-Based Services Components. The SOFTWARE may contain components that enable and facilitate the use of certain Internet-based services. You acknowledge and agree that Microsoft Corporation or their affiliates may automatically check the version of the SOFTWARE and/or its components that you are utilizing and may provide upgrades or supplements to the SOFTWARE that may be automatically downloaded to your Device.

13. Links to Third Party Sites. The SOFTWARE may provide you with the ability to link to third party sites through the use of the SOFTWARE. The third party sites are NOT under the control of Motorola, Microsoft, Microsoft Corporation or their affiliates. Neither Motorola, Microsoft nor Microsoft Corporation nor their affiliates are responsible for (i) the contents of any third party sites, any links contained in third sites, or any changes or updates to third party sites, or (ii) webcasting or any other form of transmission received from any third party sites. If the SOFTWARE provides links to third party sites, those links are provided to you only as a convenience, and the inclusion of any link does not imply an endorsement of the third party site by Motorola, Microsoft, Microsoft Corporation or their affiliates.

14. Additional Software/Services. The SOFTWARE may permit Motorola, Microsoft, Microsoft Corporation or their affiliates to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-based services components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE ("Supplemental Components").

14.1. If Motorola provides or makes available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply.

14.2. If Microsoft, Microsoft Corporation or their affiliates make available Supplemental Components, and no other EULA terms are provided, then the terms of this EULA shall apply, except that the Microsoft, Microsoft Corporation or affiliate entity providing the Supplemental Component(s) shall be the licensor of the Supplemental Component(s).

14.3. Motorola, Microsoft, Microsoft Corporation and their affiliates reserve the right to discontinue any Internet-based services provided to you or made available to you through the use of the SOFTWARE.

15. UPGRADES AND RECOVERY MEDIA.

15.1. DEVICE Software. If the DEVICE Software is provided by Motorola separate from the DEVICE on media such as a ROM chip, CD ROM disk(s) or via web download or other means, and is labeled "For Upgrade Purposes Only" or "For Recovery Purposes Only", you may install one copy of such DEVICE Software on the DEVICE as a replacement copy for the existing DEVICE Software and use it in accordance with the Grant of Software License section of this EULA.

15.2. Desktop Software. If any Desktop Software component(s) is provided by Motorola separate from the DEVICE on CD ROM disk(s) or via web download or other means, and labeled "For Upgrade Purposes Only" or "For Recovery Purposes Only", you may (i) install and use one copy of such component(s) on the computer(s) you use to exchange data with the DEVICE as a replacement copy for the existing Desktop Software component(s).

16. COPYRIGHT. All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and "applets", incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by Microsoft or its suppliers (including Microsoft Corporation). You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content. All rights not specifically granted under this EULA are reserved by Microsoft and its suppliers (including Microsoft Corporation).

17. EXPORT RESTRICTIONS. You acknowledge that SOFTWARE is subject to U.S. export jurisdiction. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and destination restrictions issued by U.S. and other governments. For additional information, see <http://www.microsoft.com/exporting/>.

18. PRODUCT SUPPORT. Product support for the SOFTWARE is NOT provided by Microsoft, its parent corporation, Microsoft Corporation, or their affiliates or subsidiaries.

19. NO LIABILITY FOR CERTAIN DAMAGES. EXCEPT AS PROHIBITED BY LAW, MICROSOFT SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

20. FOR APPLICABLE LIMITED WARRANTIES AND SPECIAL PROVISIONS PERTAINING TO YOUR PARTICULAR JURISDICTION, PLEASE REFER TO YOUR WARRANTY BOOKLET INCLUDED WITH THIS PACKAGE OR PROVIDED WITH THE SOFTWARE PRINTED MATERIALS.

Smart Practices While Driving

Drive Safe, Call Smart SM

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Go to www.motorola.com/callsmart for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.



TM

- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.*

- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

* Wherever wireless phone service is available.

index

A

- accessories 17
- account activation 22
- address book 56
- advanced calling 54
- advanced text features 54
- airplane mode 60
- answer a call 24
- applications
 - customise 34
- auto text 32

B

- backgrounds
 - customise 34
- backlighting
 - customise 35

- battery 19
- battery charge
 - indicator light 21
- battery installation 20
- battery level indicator 31
- battery life, extend 19
- BigPond Catalogue® 47
- bluetooth
 - change your device's name 60
 - make device invisible to
 - other devices 60
 - make device visible to
 - other devices 60
- Bluetooth connection
 - indicator 53
- Bluetooth indicator 30

C

- cables 51
- calendar 48
- call
 - answering 24
 - end 24
 - ending 24
 - making 23
 - timers 59
 - waiting 54
- call log 36
- caller ID 36, 57
- camera 40
- cancel key 2, 28
- close 23

- communication services
 - notifications indicator 31
- computer 51
- connect to 51
- connections 50
- contact list
 - picture ID 36
- contacts 56
- create a playlist 40

D

- date, setting 35
- delete text 54
- desktop interface 50
- device settings 58
- dial a phone number 23
- dialled calls 36
- directional pad 2, 28
- display 3, 23

- display backlight brightness
 - customise 35
- done key 2, 28

E

- e-mail
 - reading and managing 58
- e-mail message indicator 45
- emergency number 37
- end a call 24
- end key 2, 24, 29

F

- font size
 - customise 35

G

- games 60

H

- handsfree speaker 33
- headset connection 2
- hold a call 54

I

- Incoming Call message 36
- instant messaging 47
- international access code 54

J

- jump key 2, 17, 27
- jump screen 3, 26

K

- keyboard 29
- keyboard mapping 59
- keyguard 32

L

language 58
left and right shoulder keys 2, 29
location 58

M

make a call 23
memory card 18
 rename 61
memory card activity
 indicator 31
memory card name
 available memory
 other information 61
menu key 2, 27
menus 3, 27
message indicator 44
messaging 43
Microsoft license agreement 66
mini music player 38

mini-USB port 21
missed calls message 36
multimedia message 58

N

navigate in text boxes 55
network indicator 30
network settings 59
notes 48

O

optional accessory 17
optional feature 17

P

phone calls indicator 31
phone controls 29
phone number 25
photo 40
picture ID 36, 57
PIN code 21

play music 39
power key 21
press trackball 17

Q

quick jump 28

R

received calls 36
recent calls 36
registration complete 23
return a call 36
ringer ID 36, 57
ringtones 34

S

safety information 9
safety tips 71
send key 2, 24, 29
send My vCard 53
signal strength indicator 30

- SIM Blocked message 21
- SIM card 18, 21
- SIM installation 18
- SMS 58
- sound profile indicator 31
- sound profiles 34
- special characters 56
- speed dial 56
- store your number 25

T

- text
 - copy 55
 - cut 55
 - paste 55
 - undo 55
- text entry 32
- time, setting 35
- timers 59
- title bar and indicators 30
- to do 49

- trackball 2, 17
- trackball key 28
- turn on/off 21

U

- USB cables 51
- USB connector indicator 32
- USB/Power connection port 2

V

- voice mail 37
- voice mail message indicator 37
- volume keys 2, 29

W

- Web browser 46
- WHO information 64

Y

- your phone number 25

www.motorola.com



6802937J14